

MONTAGEANLEITUNG

sun-10377abc · Audi A6 e-tron 2024- SunClip Auto Sonnenschutz

DE: Montageanleitung

MT: Istruzzjonijiet għall-assemblaġġ

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcje montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucțiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Upute za sastavljanje


CZ: Návod k montáži

LV: Montāžas instrukcija

HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos

BG: Инструкции за сглобяване

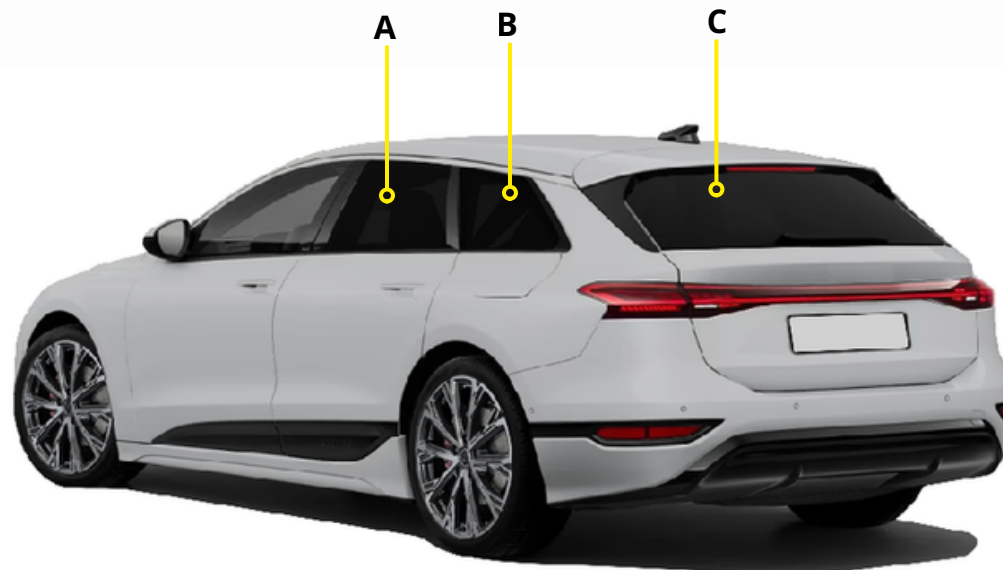

1xAL

1xAR



2x B




1x C



1x



6x SC16



2x SC8-7



4x SC8-10








2x SC8-20






MONTAGEANLEITUNG

sun-10377abc · Audi A6 e-tron 2024- SunClip Auto Sonnenschutz

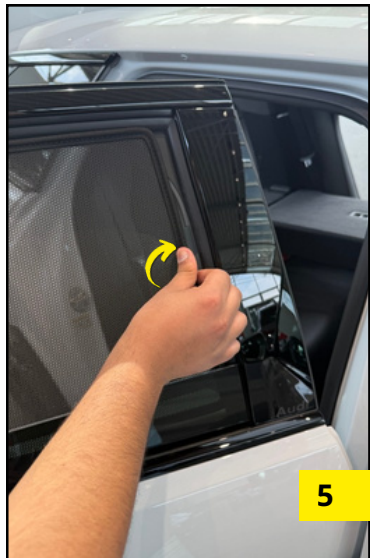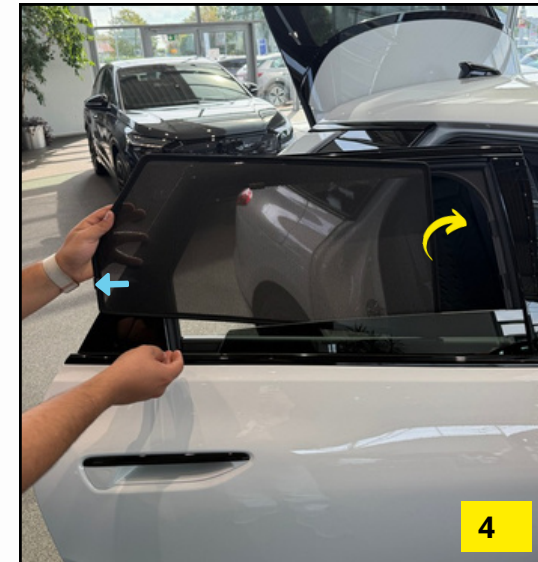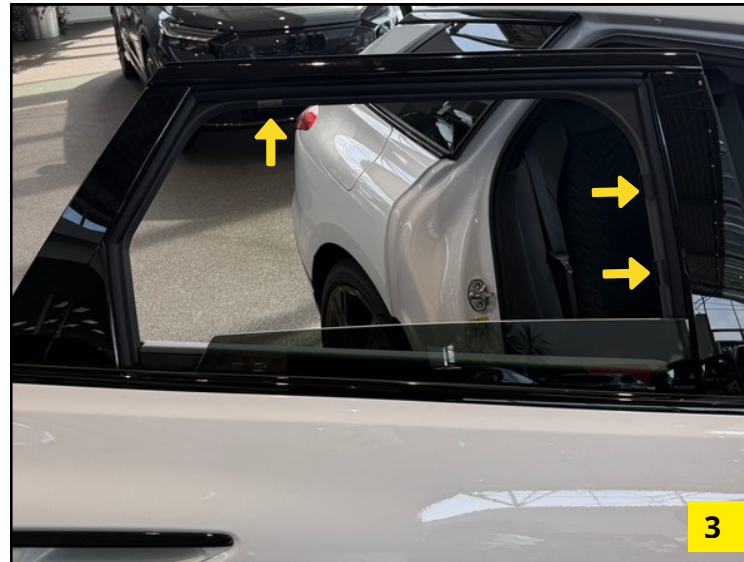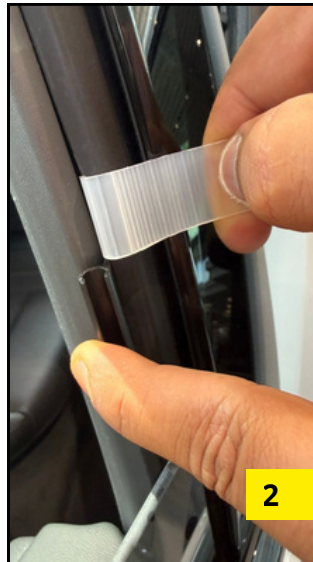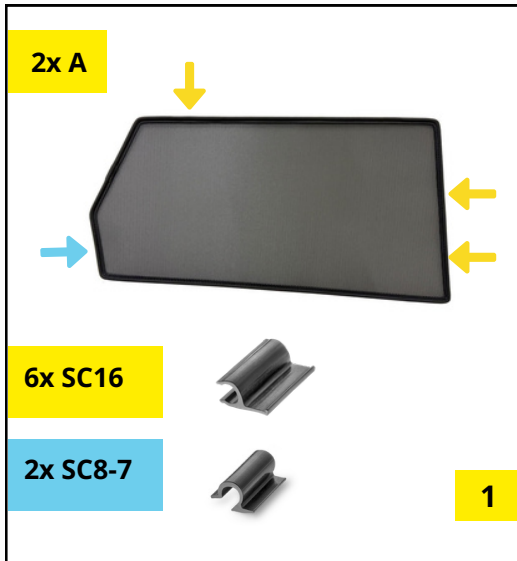

MONTAGEANLEITUNG

sun-10377abc · Audi A6 e-tron 2024- SunClip Auto Sonnenschutz

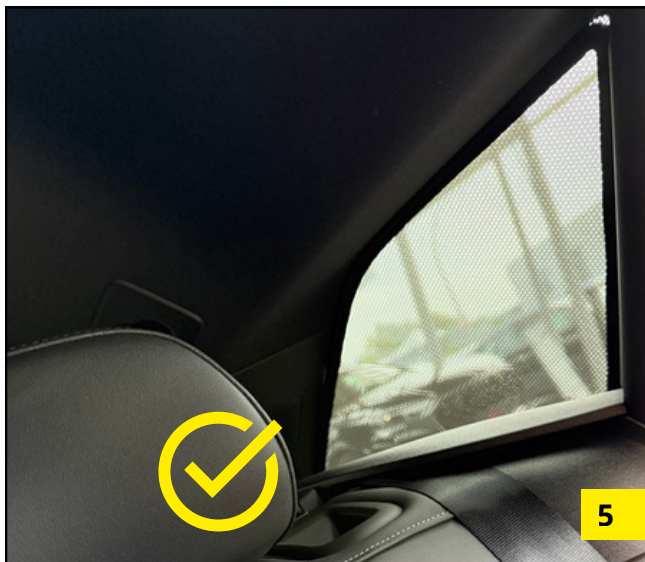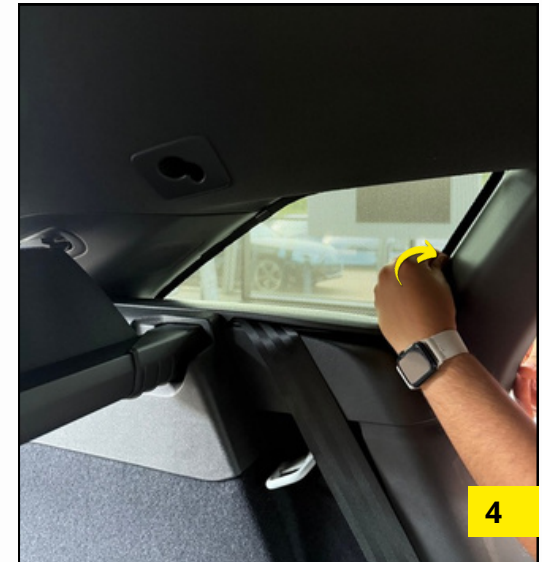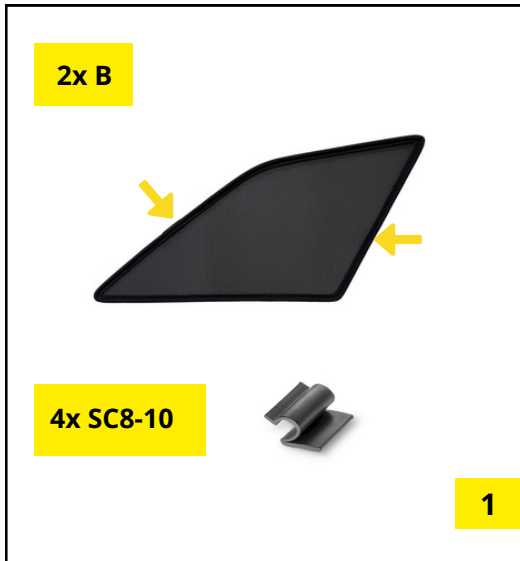

MONTAGEANLEITUNG

sun-10377abc · Audi A6 e-tron 2024- SunClip Auto Sonnenschutz

