

MONTAGEANLEITUNG

sun-10346abc · VW Caddy & Ford Tourneo Connect 2020-

DE: Montageanleitung

MT: Istruzioni per l'installazione

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcja montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucțiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Upute za sastavljanje


CZ: Návod k montáži

LV: Montāžas instrukcija

HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos

BG: Инструкции за сглобяване

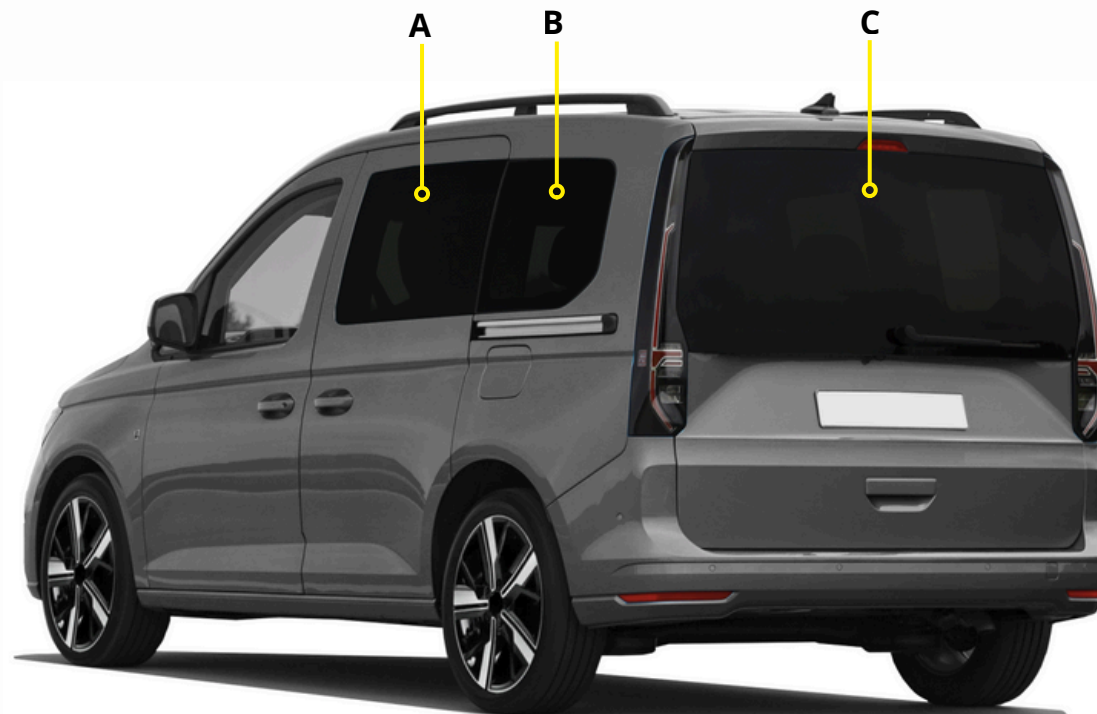

2x A



8x SC8-20



2x B



4x SC8-20



1x C



1x SC9-20



6x SC7-20




1x

MONTAGEANLEITUNG

sun-10346abc · VW Caddy & Ford Tourneo Connect 2020-




2x A

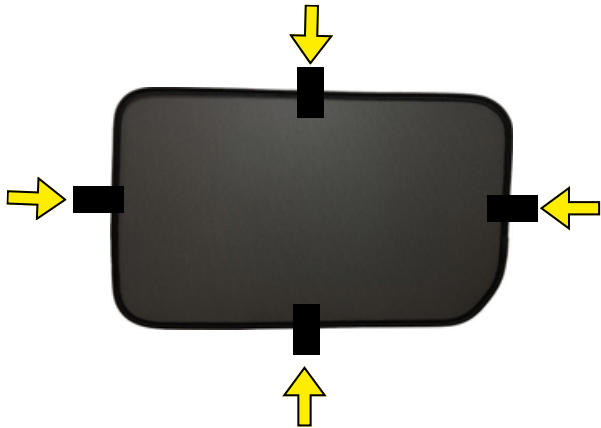

8x SC20-20



1x

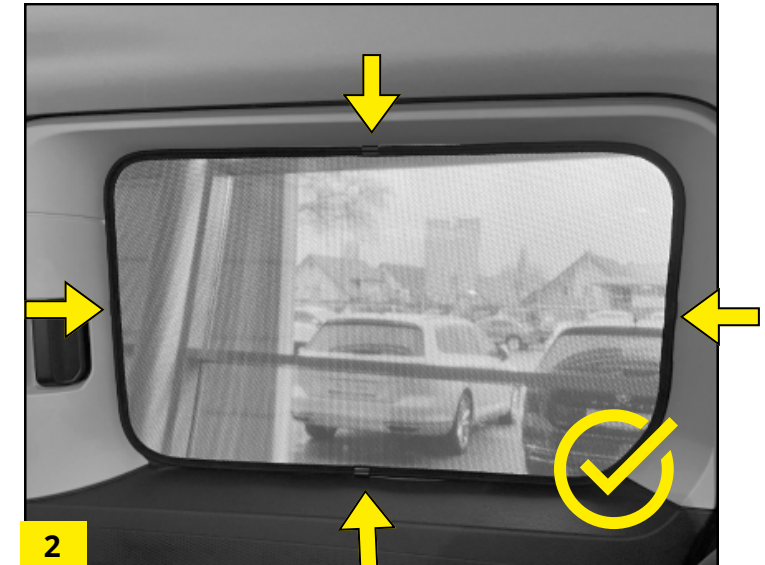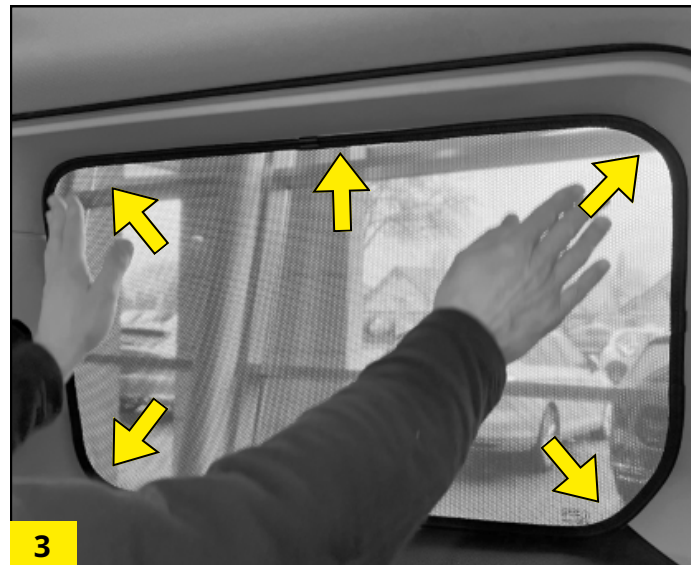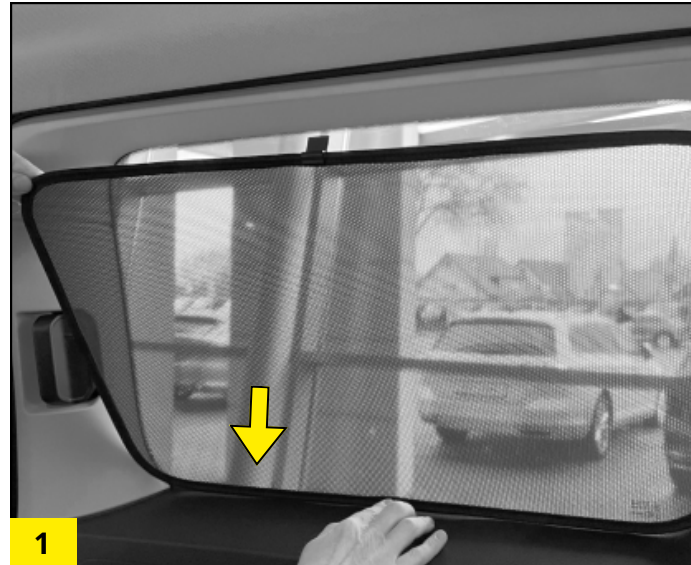

MONTAGEANLEITUNG

sun-10346abc · VW Caddy & Ford Tourneo Connect 2020-

2x B



4x SC8-20




MONTAGEANLEITUNG

sun-10346abc · VW Caddy & Ford Tourneo Connect 2020-

1x C



SC9-20

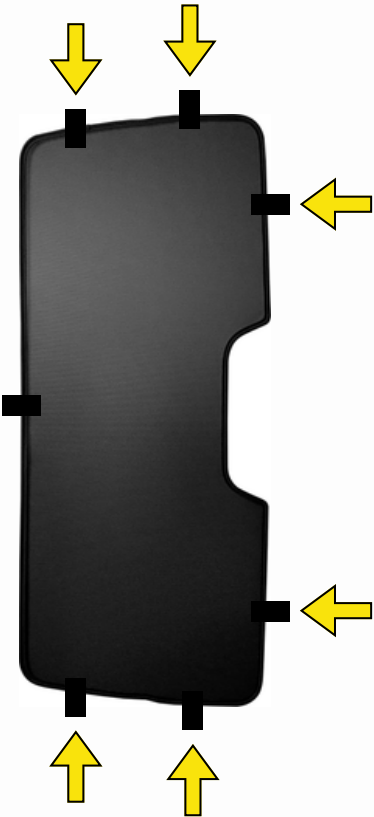


6x SC7-20




1x SC9-20

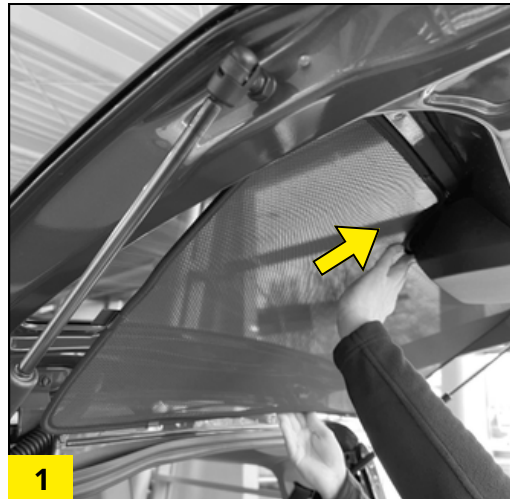


1

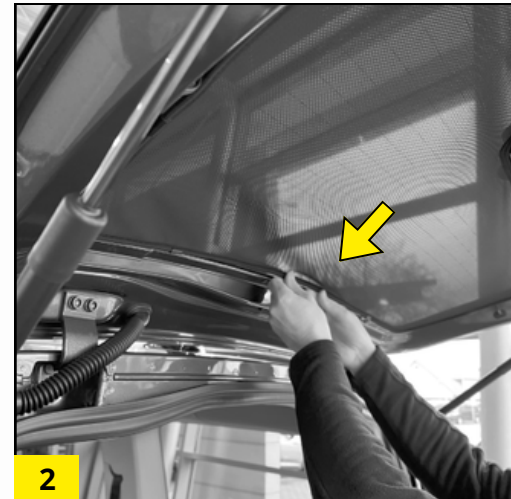

2

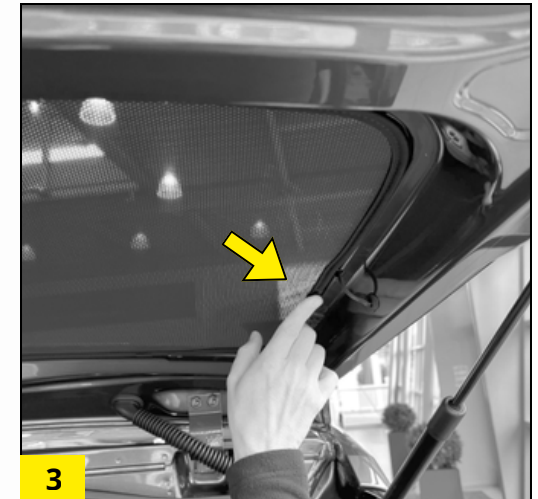

3

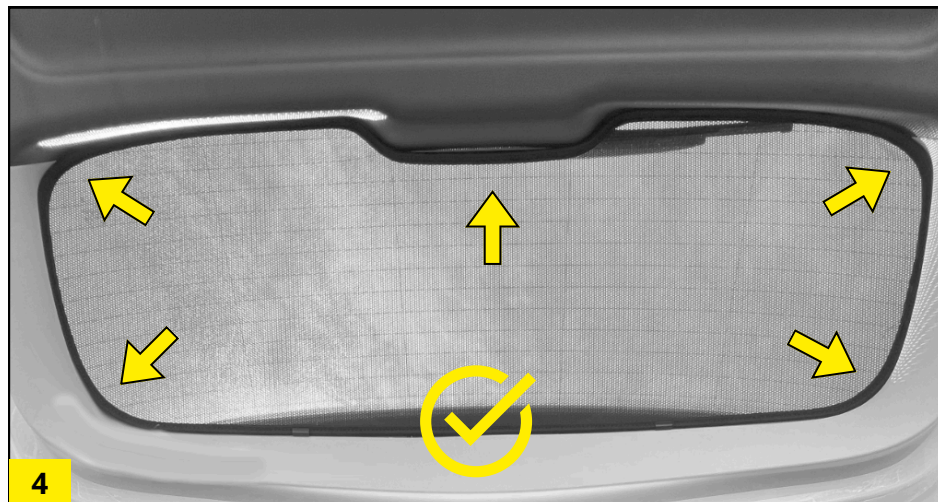

4