

# MONTAGEANLEITUNG

sun-10442abc · Mercedes C-Klasse T-Modell S205 2014-2021 SunClip Sonnenschutz



DE: Montageanleitung

MT: Istruzzjonijiet għall-assemblaġġ

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcje montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucțiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Upute za sastavljanje


CZ: Návod k montáži

LV: Montāžas instrukcija

HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos

BG: Инструкции за сглобяване

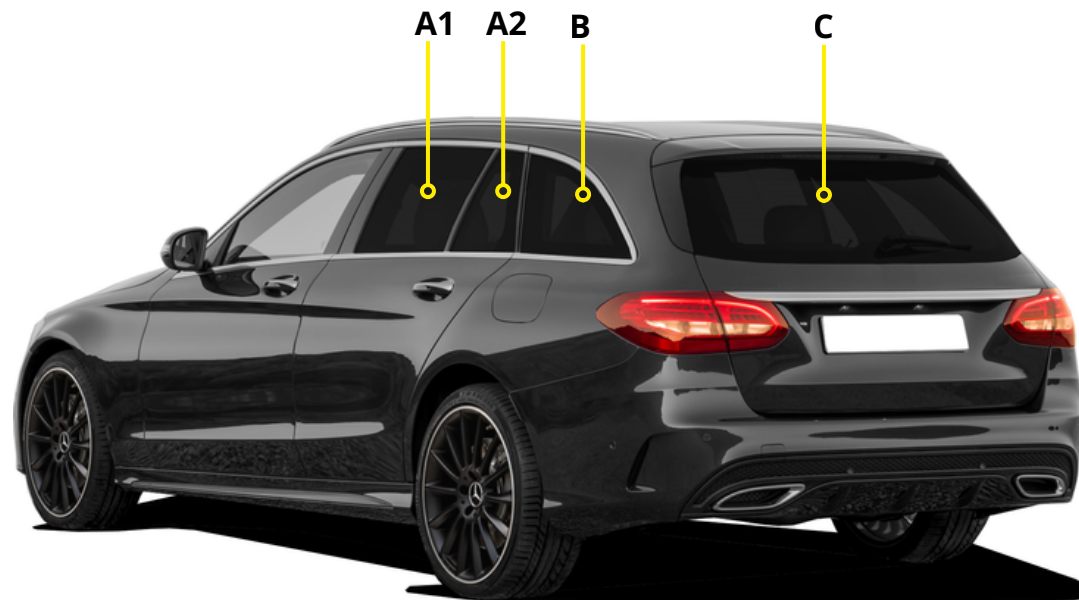

2x A1



2x A2




2x B



1x C



2x SC12-40




4x SC13-25



2x SC8-10



2x SC9-20






1x







# MONTAGEANLEITUNG

sun-10442abc · Mercedes C-Klasse T-Modell S205 2014-2021 SunClip Sonnenschutz

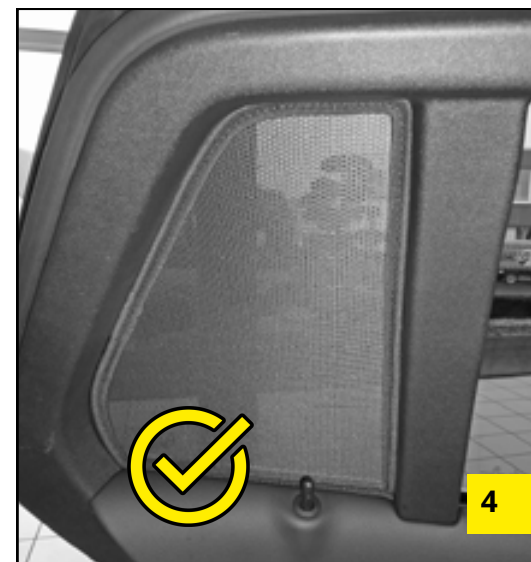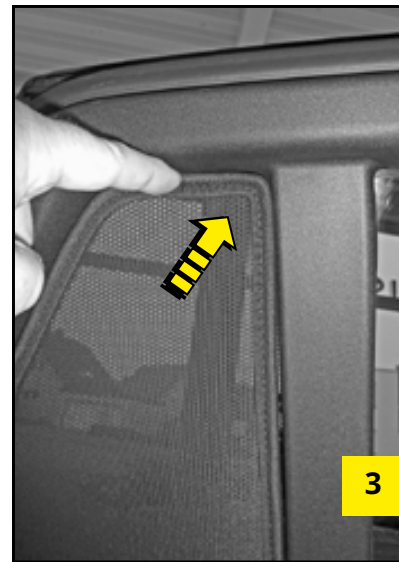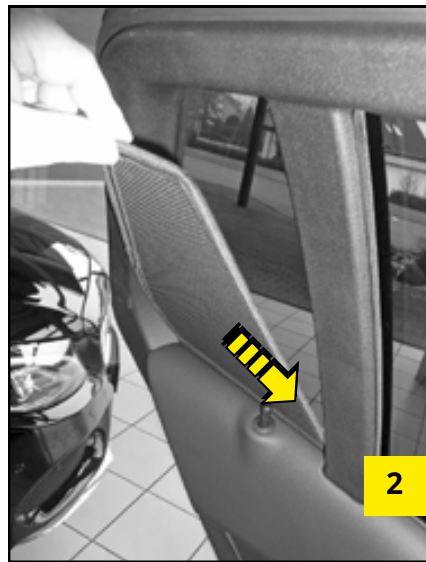




# MONTAGEANLEITUNG

sun-10442abc · Mercedes C-Klasse T-Modell S205 2014-2021 SunClip Sonnenschutz

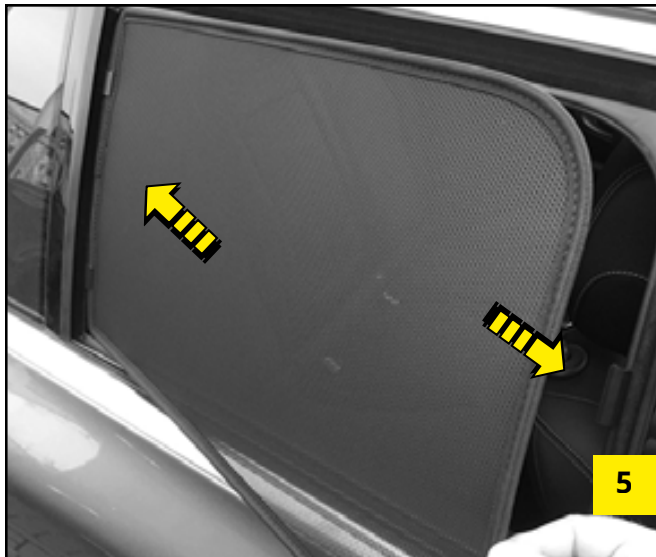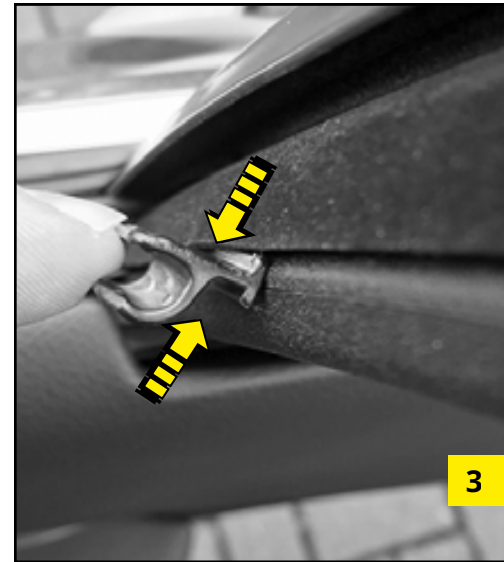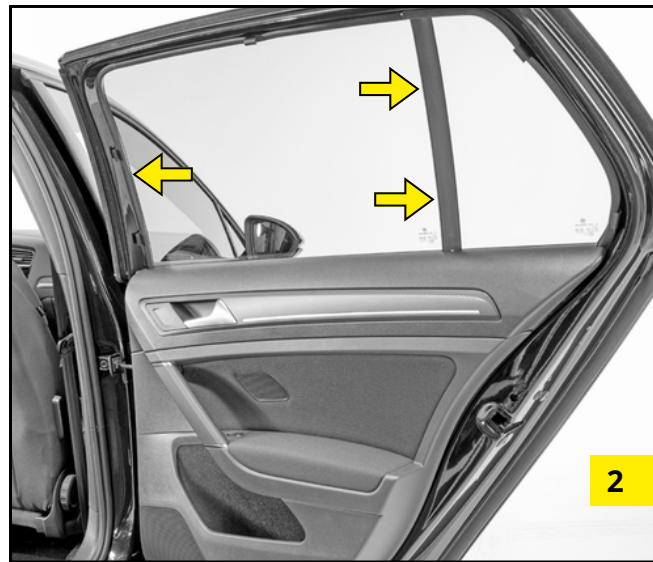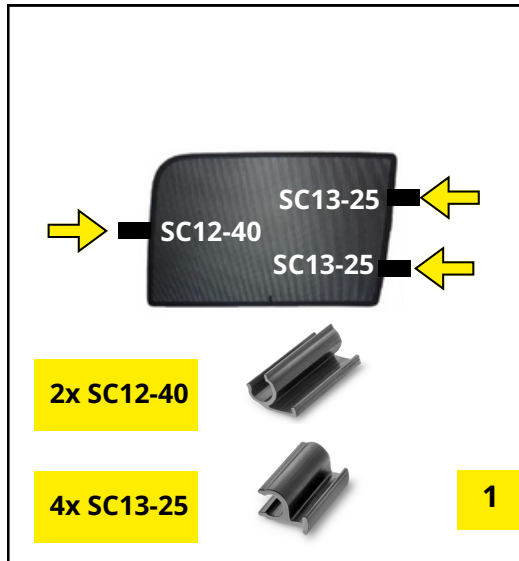

# MONTAGEANLEITUNG

sun-10442abc · Mercedes C-Klasse T-Modell S205 2014-2021 SunClip Sonnenschutz

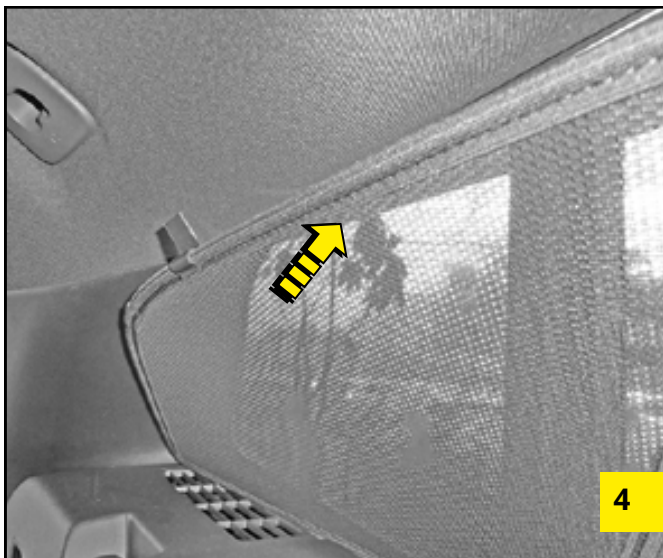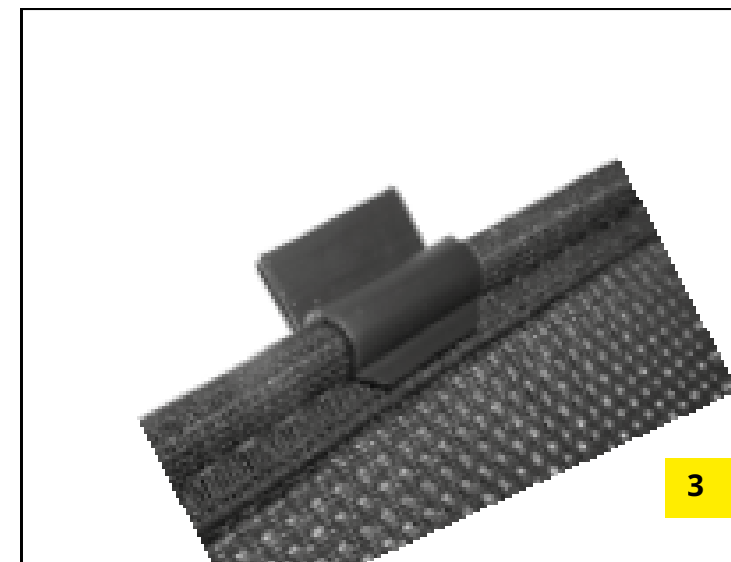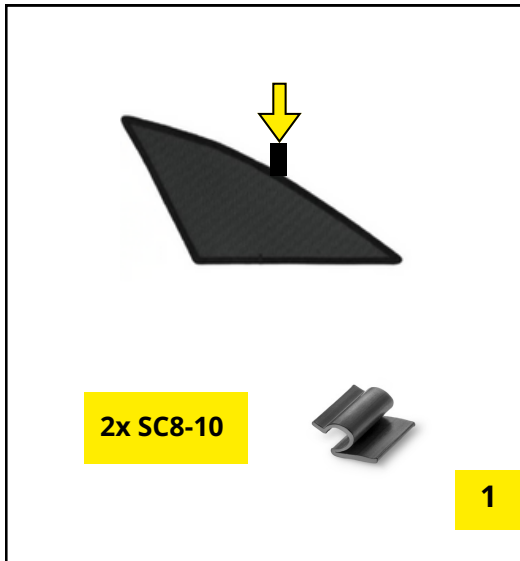

# MONTAGEANLEITUNG

sun-10442abc · Mercedes C-Klasse T-Modell S205 2014-2021 SunClip Sonnenschutz

