

MONTAGEANLEITUNG

sun-10433abc · Ford Puma 2019- SunClip Auto Sonnenschutz

DE: Montageanleitung

MT: Istruzioni per l'installazione

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcja montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucţiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Összeszerelési útmutató


CZ: Návod k montáži

LV: Montāžas instrukcija

HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos

BG: Инструкции за сглобяване

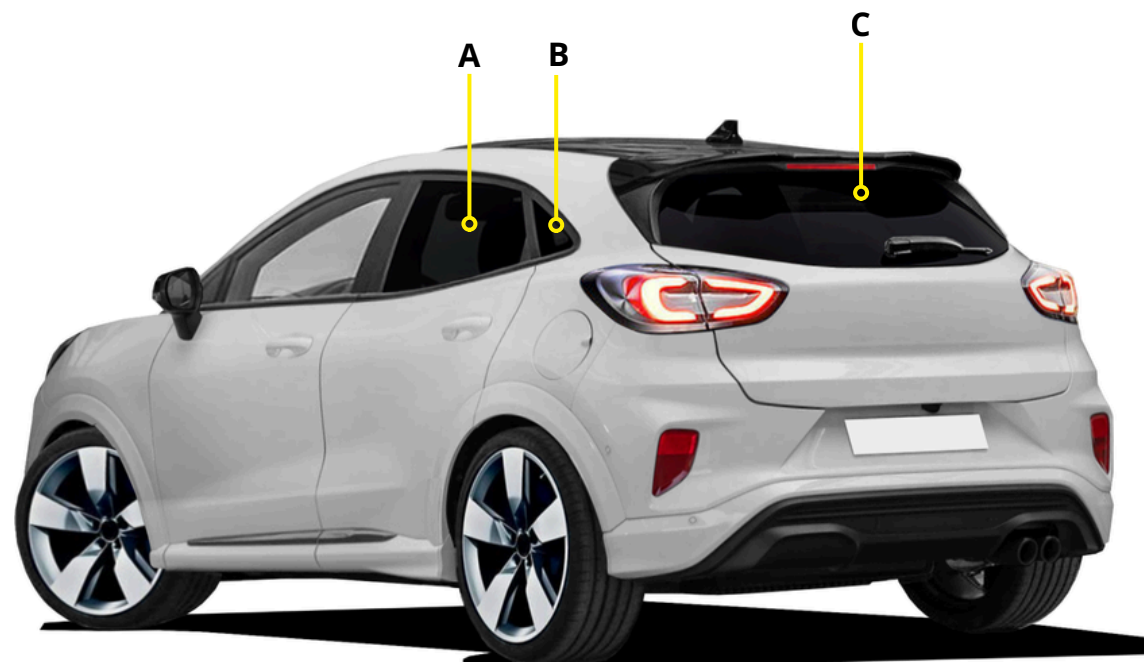

2x A




2x B



1x C



1x

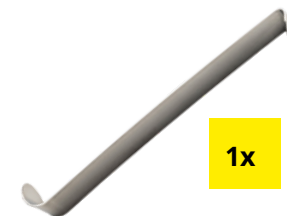

8x KC1



2x SC9-20



MONTAGEANLEITUNG

sun-10433abc · Ford Puma 2019- SunClip Auto Sonnenschutz


2x A




8x KC1



1




2

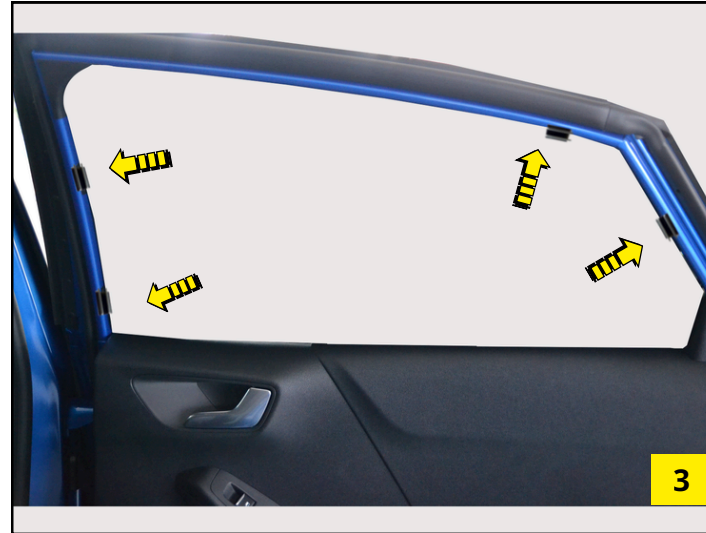

3




4

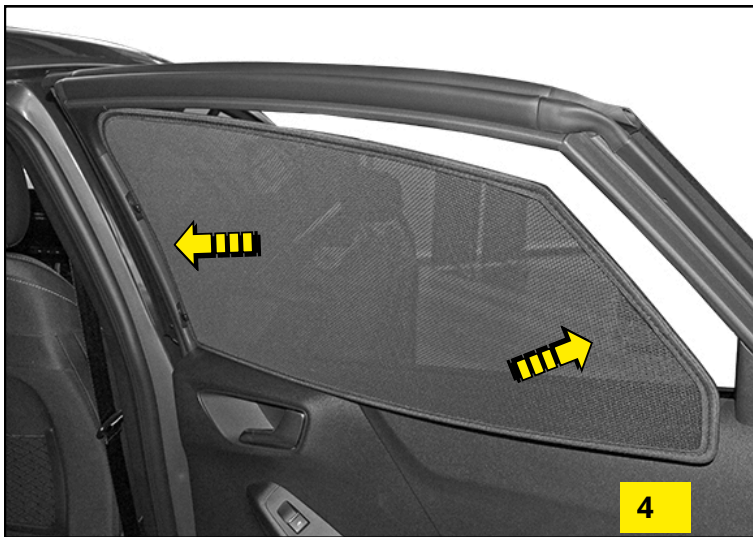

4



2

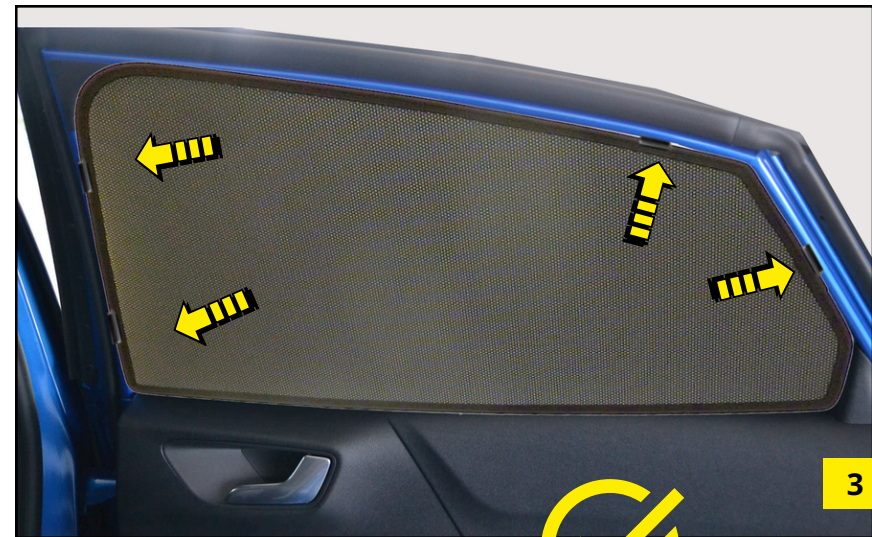

3



MONTAGEANLEITUNG

sun-10433abc · Ford Puma 2019- SunClip Auto Sonnenschutz



MONTAGEANLEITUNG

sun-10433abc · Ford Puma 2019- SunClip Auto Sonnenschutz




1



2




3

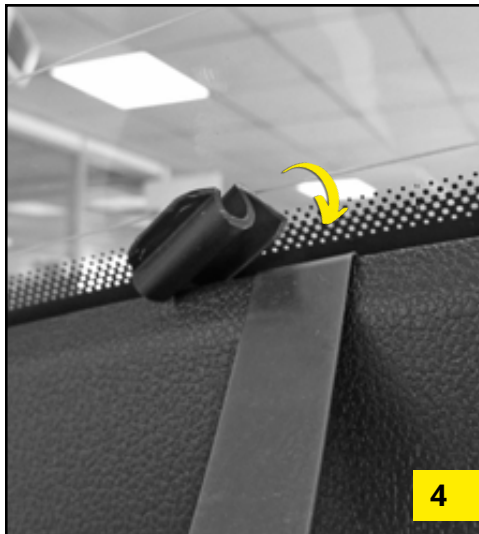

4



5

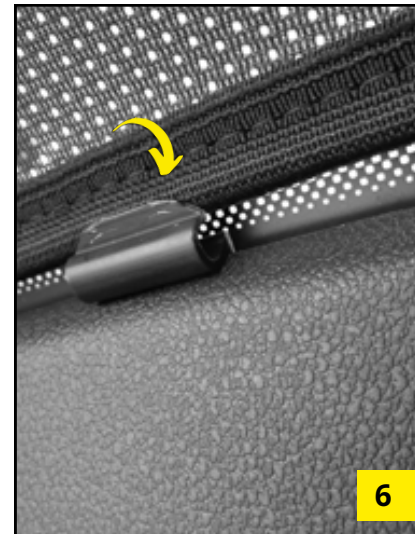

6



7